9.3 CONTROL PANEL SECTION

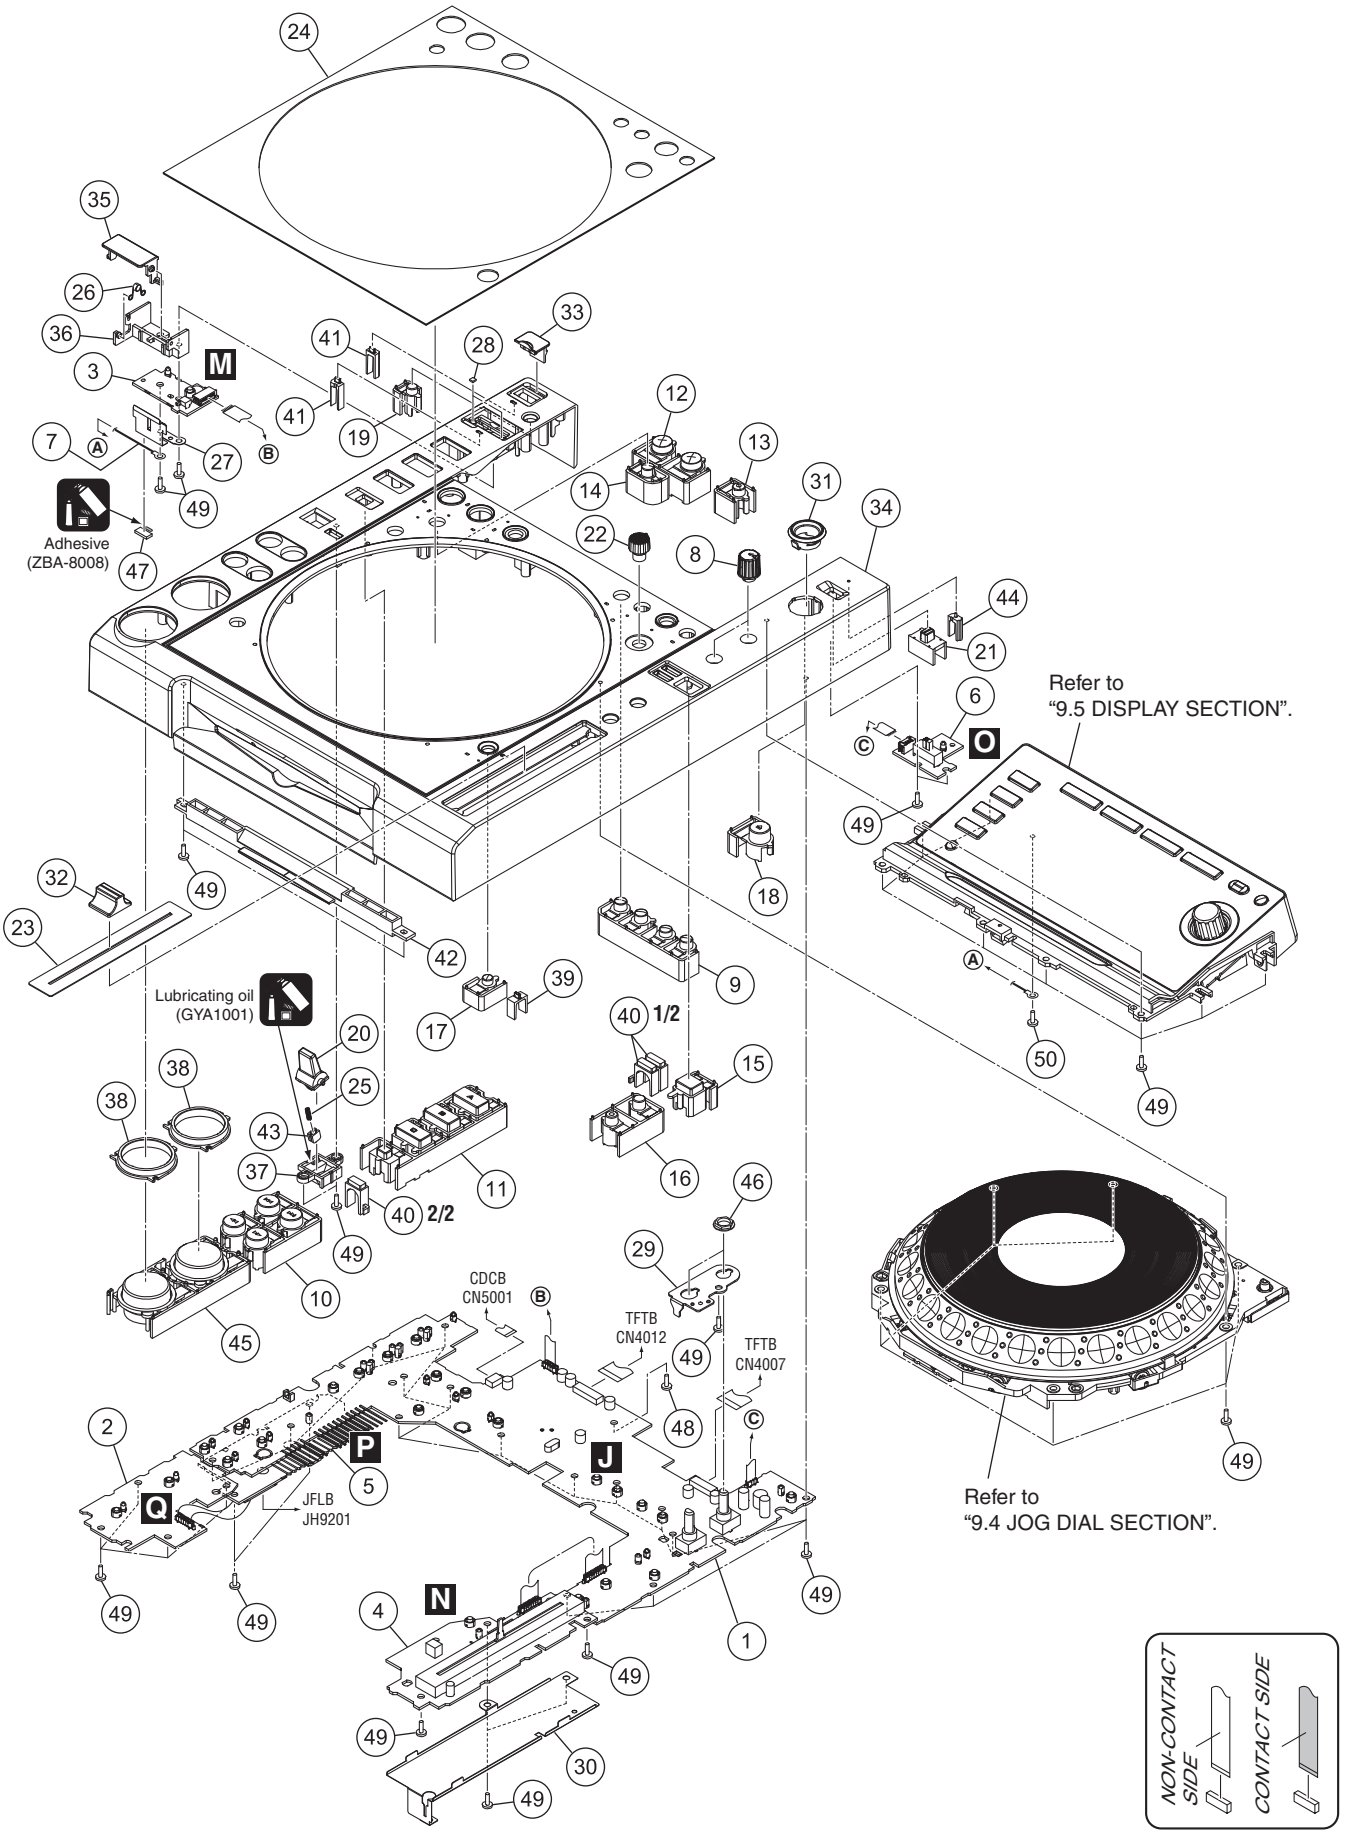

CONTROL PANEL SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	PNLB Assy	DWG1665
	2	KSWB Assy	DWS1409
	3	SDSW Assy	DWS1420
	4	SLDB Assy	DWX2983
	5	CNCT Assy	DWX3009
	6	EUPB Assy	DWX3042
	7	Earth Lead Unit / 300V	DDF1032
	8	Rotary Knob C	DAA1194
	9	Button (CALL)	DAC2466
	10	Button (SERCH)	DAC2468
	11	Button (HOT CUE)	DAC2469
	12	Button (LOOP)	DAC2470
	13	Button (RELOOP)	DAC2471
	14	Button (4-BEAT LOOP)	DAC2472
	15	Button (JOG MODE)	DAC2473
	16	Button (TEMPO)	DAC2474
	17	Button (TEMPO REST)	DAC2475
	18	Button (EJECT)	DAC2476
	19	Button (USB STOP)	DAC2477
	20	Lever	DAC2478
	21	Slide SW Knob	DAC2479
	22	Adjust Knob Black	DAC2528
	23	Slide Sheet 1C	DAH2404
	24	Top Panel	DAH2703
	25	Lever Spring	DBH1702
	26	Spring	DBH1717
	27	Card Spring	DBK1340
	28	Door Cushion	DEB1780
	29	VR Stay	DNF1663
	30	Earth Plate	DNH2849
	31	Eject Guard	DNK3958
	32	Slide Knob	DNK4498
	33	USB Cover	DNK4999
	34	Control Panel	DNK5306
	35	SD Card Door	DNK5308
	36	SD Door Holder	DNK5309
	37	Lever Plate	DNK5312
	38	Ring Lens (PLAY)	DNK5315
	39	TEMPO Lens	DNK5316
	40	MODE Lens	DNK5317
	41	DEVICE Lens	DNK5318
	42	Front Lens	DNK5328
	43	Lever Cap	DNK5344
	44	EUP Lens	DNK5408
	45	PLAY Button Assy	DXB2069
	46	Flange Nut M9	DBN1008
	47	Gasket (7 x 15 x 1)	DEC3259
	48	Screw	BBZ30P060FTB
	49	Screw	BPZ30P080FNI
	50	Screw	BBZ26P060FTB